


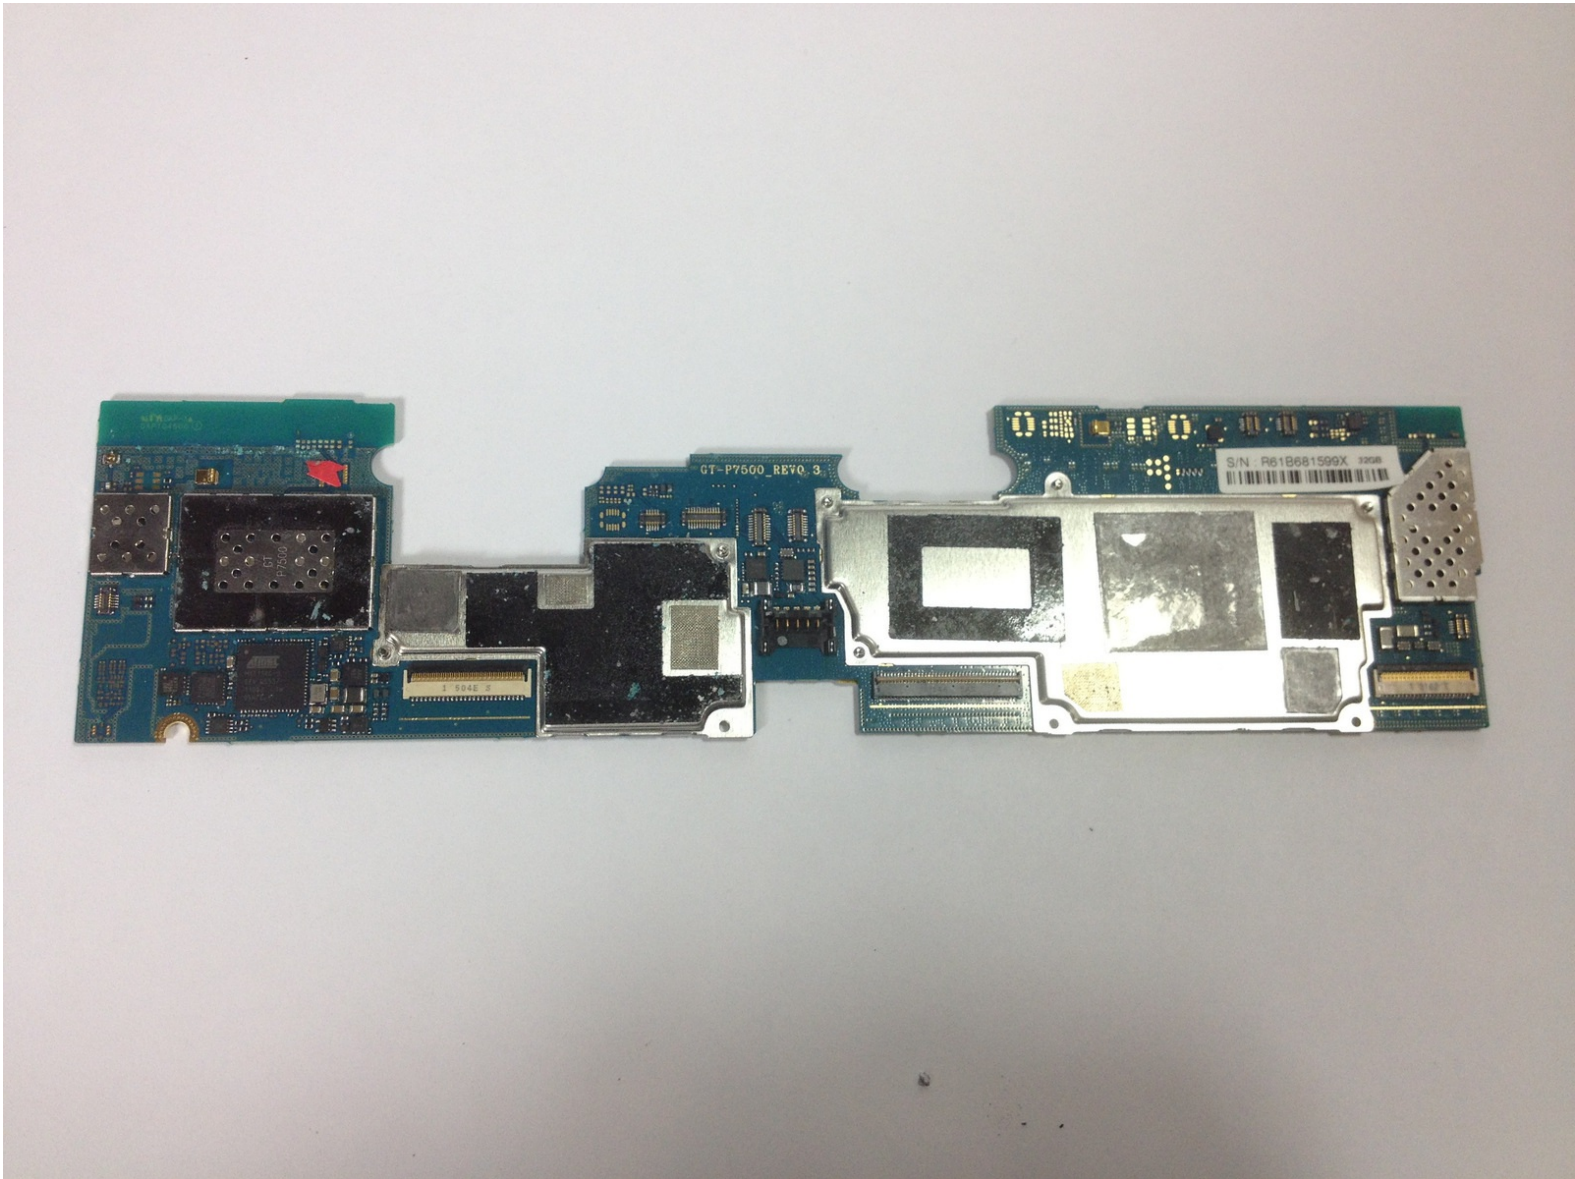

# Samsung Galaxy Tab 10.1 Motherboard Replacement

Use this guide to help you replace a damaged or malfunctioning motherboard.

Written By: Davie Sy



## INTRODUCTION

In this guide, you will learn how to replace the motherboard on your Samsung Galaxy Tab 10.1. A faulty motherboard can lead to a multitude of performance issues, especially if your device doesn't turn on at all. There are a couple prerequisites we need to get out of the way first!



### TOOLS:


- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [Y1 Tri-wing Screwdriver](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [Phillips #00 Screwdriver](#) (1)



### PARTS:

- [Samsung Galaxy Tab 10.1 Motherboard](#) (1)


## Step 1 — Rear Panel

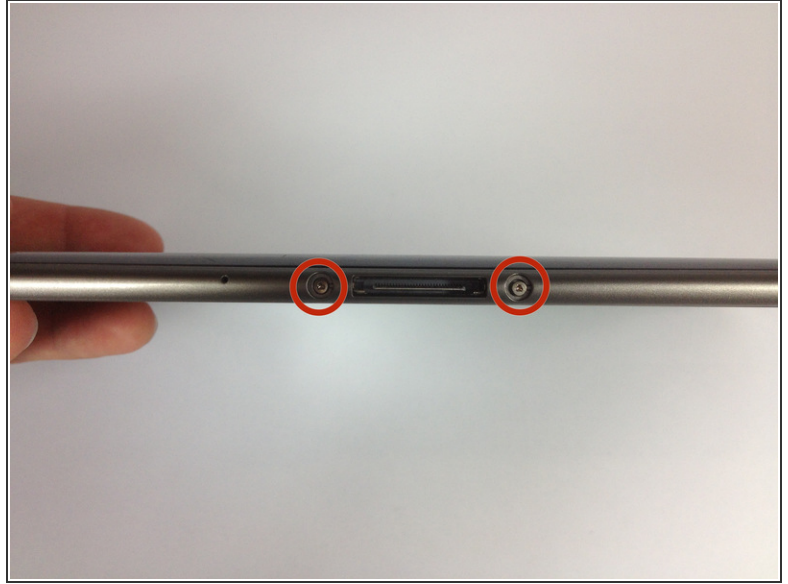

- Place the bottom of the tablet towards you.
- Remove the two 4.1 mm screws near the charge port with a Tri-Wing screwdriver.



## Step 2

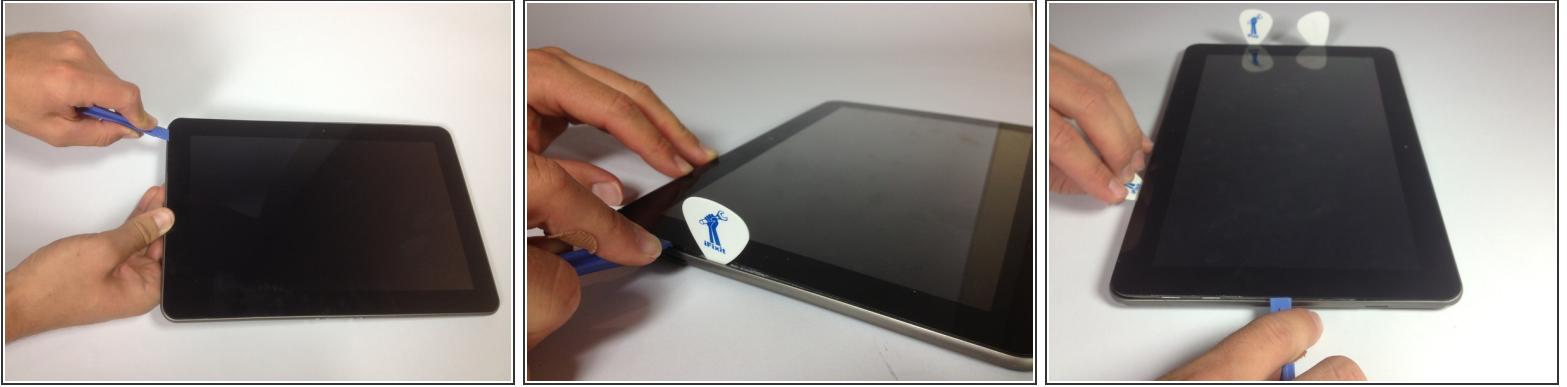




- Start in the middle of the left side and insert a plastic opening tool between the rear panel and the front panel assembly.
  - Carefully run the plastic opening tool along the left and top edge to pry the rear panel away from the rest of the device.
  - ⓘ Place opening picks along the side you have already pried open to keep the back panel detached from the rest of the device.
- ⚠ Be sure to work carefully, as prying too firmly can crack the screen.

## Step 3




- Using the plastic opening tools, continue to carefully run along the right and bottom edge, and then lift the screen from the back panel.

## Step 4 — Battery

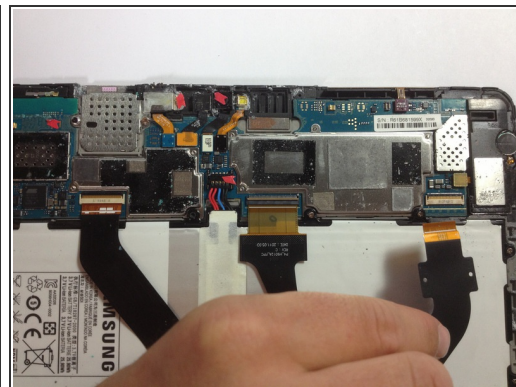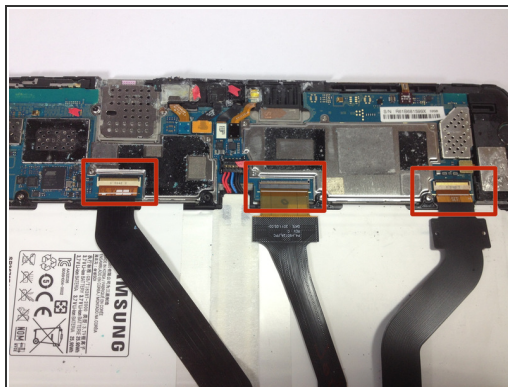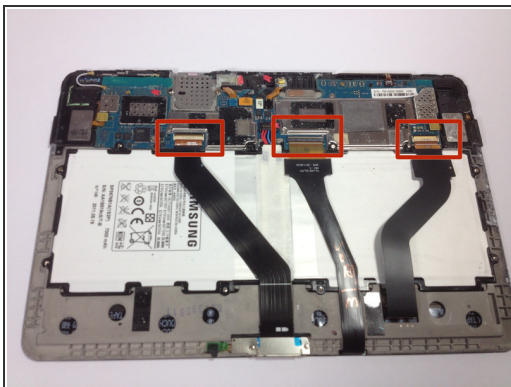

- Flip up the retaining flaps on the ZIF connectors that secure the three large ribbon cables.
- Carefully pull the three ribbon cables from their sockets on the motherboard.


## Step 5

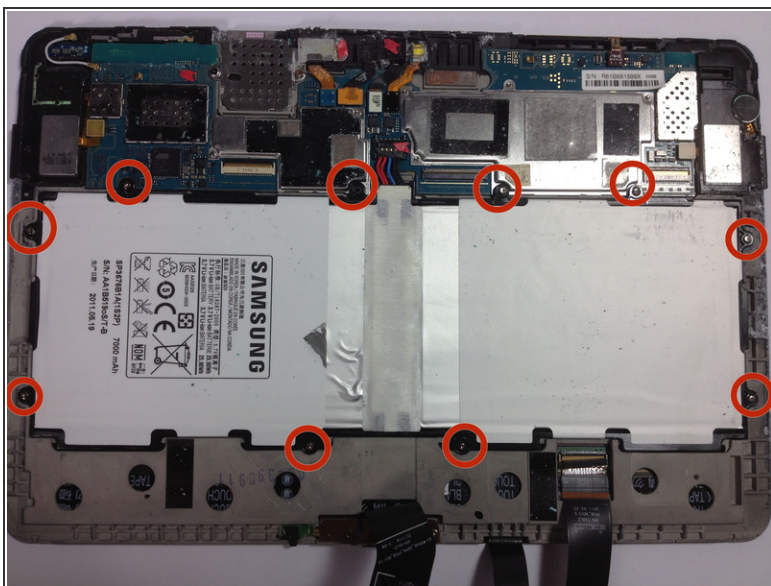

- Remove the ten 3 mm Phillips #00 screws surrounding the battery.




## Step 6

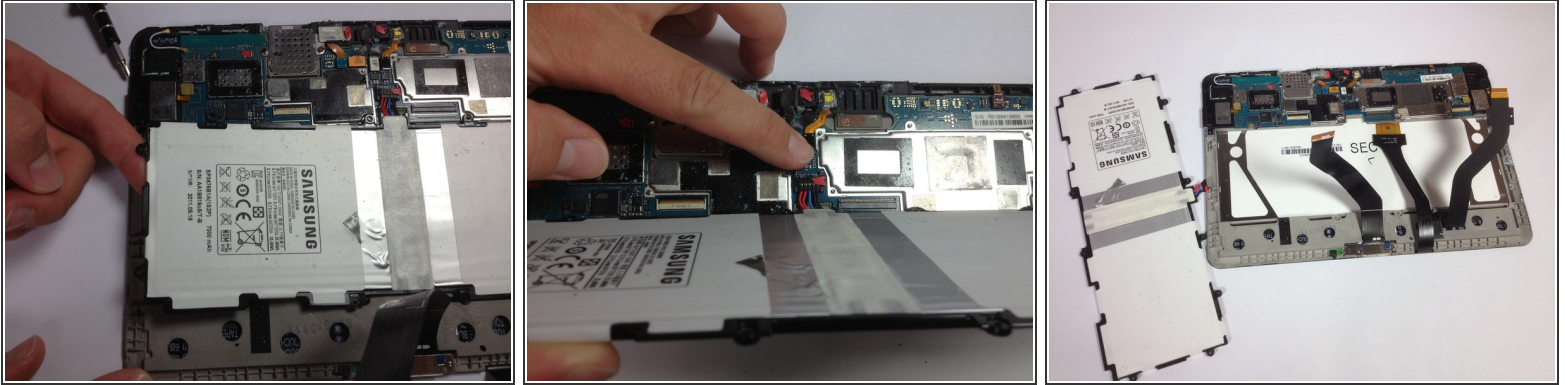



- Lift the edge of the battery up with your finger or a spudger.
- Detach the battery by holding the motherboard down while gently lifting the battery up.

## Step 7 — Volume and Power Button

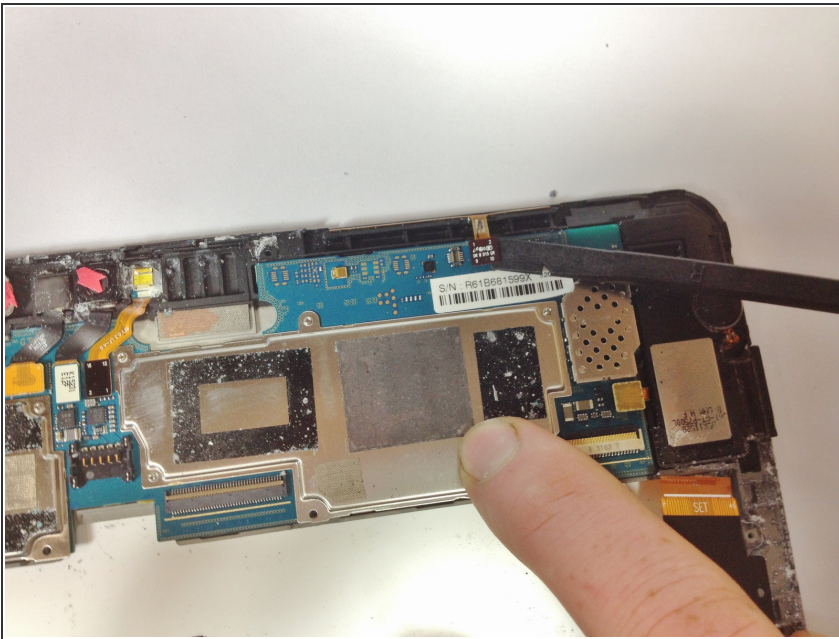

- Hold down the motherboard with your finger and use a spudger to gently pry up the connection for the volume keys and power key.

## Step 8 — Flash and Rear Camera Connection

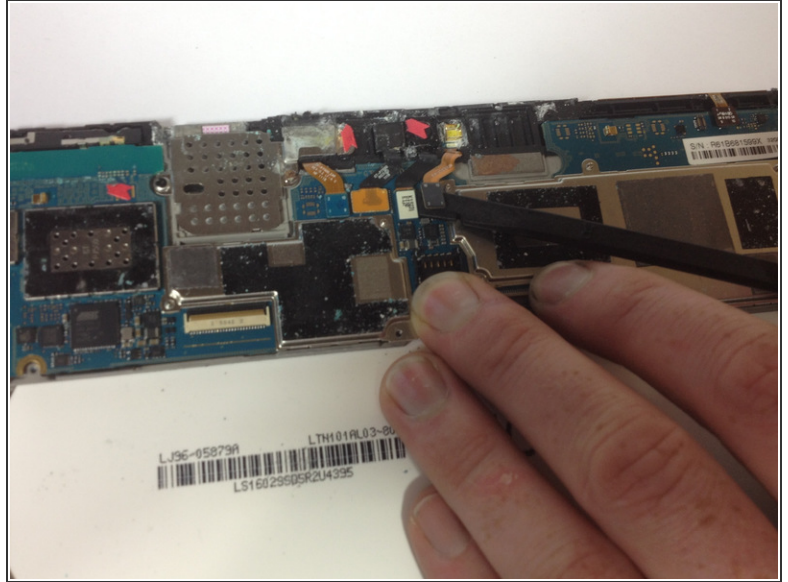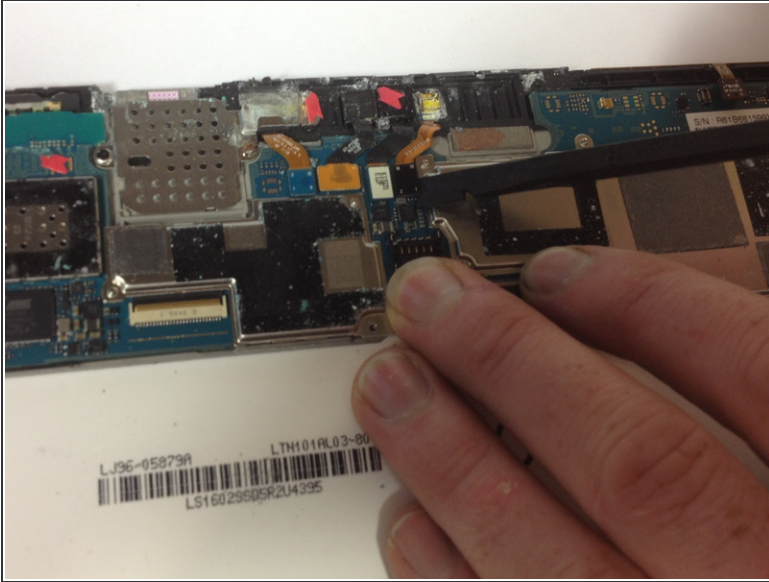

- Using the flat end of a spudger, disconnect the black flash cable connector from the motherboard.
- Disconnect the white rear-facing camera connector.


## Step 9 — Front Camera, Micro SD card/headphone Connection



- Use the flat end of a spudger to disconnect the orange front-facing camera connector.
- Disconnect the blue Micro SD card/headphone jack connector from its socket on the motherboard.




## Step 10 — Speakers and Antenna Connection

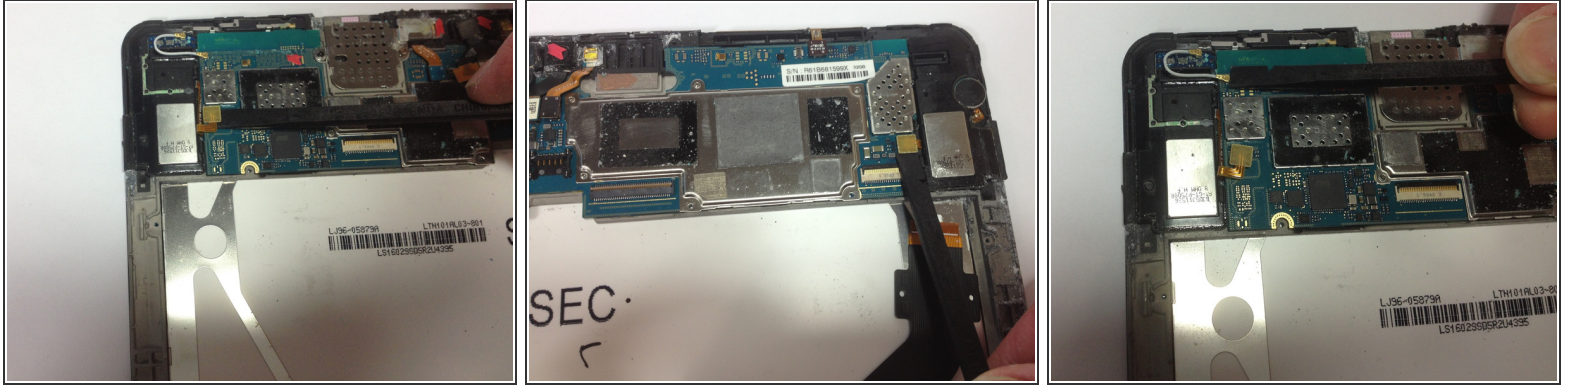

- Using the flat end of a spudger, disconnect the orange speaker connectors for the left and right speakers.
- Disconnect the gold antenna cable connector from its socket on the motherboard.

## Step 11 — Motherboard Removal

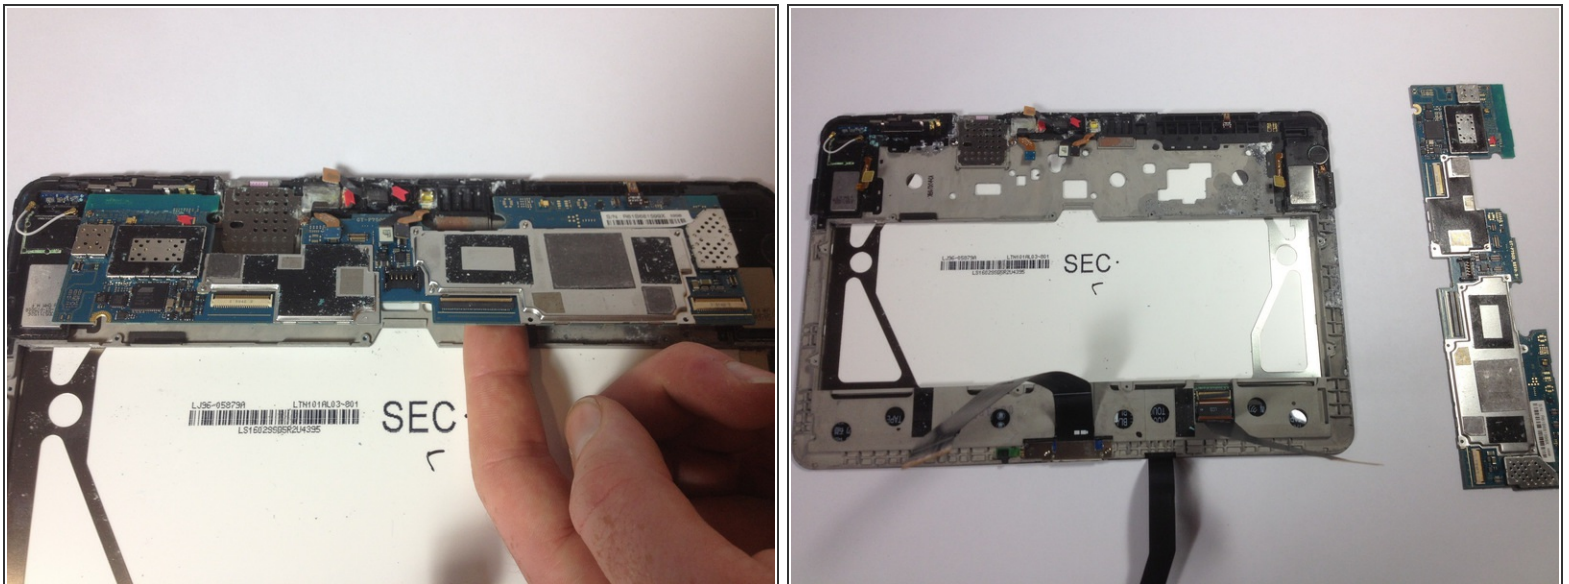

- Lifting from the bottom edge, gently remove the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 11:23:24 PM.